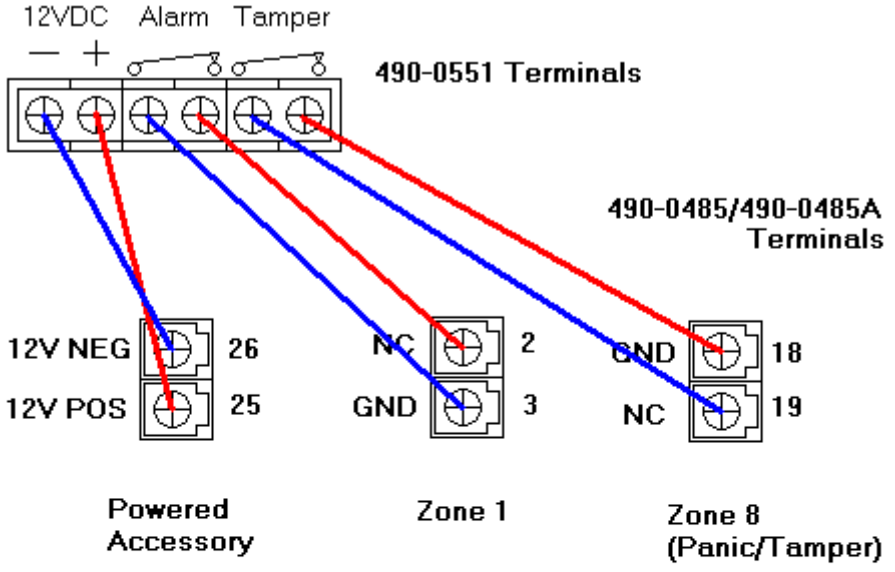

NOTES:

The 490-0485/A Terminals are not shown as they are arranged in the terminal box.

Connecting the 490-0551 Tamper terminals to the Panic/Tamper zone is optional.

For illustration, the 490-0551 is shown connected to Zone 1. Regardless of the zone you connect to on the 490-0485/A, the power terminals are 25 and 26.